

FRIGIDAIRE®

All about the

Use & Care

of your Water Kettle



TABLE OF CONTENTS

Important Safeguards	2-3	Replacement Parts	8
Parts and Features	4-5	Problem Solving	8
Before Using Your Water Kettle	6	Warranty Information	9-10
Using Your Water Kettle	6	Spanish User's Manual	11-21
Caring for Your Water Kettle	7	French User's Manual	22-32

Register via the internet at:

www.frigidaire.com/productregistration

USA & Canada 1-888-845-7330

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1. READ ALL INSTRUCTIONS.**
- Do not touch hot surfaces. Use handle.
- To protect against fire, electric shock and injury to persons, **DO NOT IMMERSE CORD**, plug or base unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let power cord touch hot surfaces or hang over edge of table or counter where it can be pulled on by children or tripped over unintentionally.
- Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
- Always attach appliance to its base unit first, then plug cord into wall outlet. To disconnect, push "Off" button, then remove plug from wall outlet.
- Do not fill this appliance with any liquids other than water.
- Do not use this appliance for any purpose other than its intended use.
- Scalding may occur if the lid is opened during the heating cycle.
- WARNING:** This product contains chemicals known to the State of California to cause cancer, birth defects or reproductive harm.
WASH HANDS AFTER HANDLING.



CAUTION

The Frigidaire Water Kettle is intended to heat water only. It is not designed to be used for cooking food or for heating any other fluids. Do not fill the kettle with any liquids other than water.

SAVE THESE INSTRUCTIONS

CONSUMER SAFETY INFORMATION

THIS UNIT IS FOR HOUSEHOLD USE ONLY.

Grounding Plug

This appliance has a grounding 3-prong plug to reduce the risk of electric shock. This plug will fit into an outlet only one way. If the plug does not fit into an available outlet, contact a qualified electrician.

Do not modify the plug in any way. If an extension cord is used, it should be a grounding 3-wire cord.

Product Specifications

Model Number	FPKT58D7NS
Rated Voltage	120V/60Hz
Rated Wattage	1500W
Rated Capacity	1.7 Liters



CAUTION

Short cord Instructions: This appliance is equipped with a short power supply cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled with a longer cord. Do not allow children to use or be near this appliance without close adult supervision. Extension cords are available and may be used if care is exercised in their use. If an extension cord is used, (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

PARTS AND FEATURES



Lid

Easy-to-open lid makes it easy to fill the kettle. To open lid, press center button. To close, press lid down until latched.

CAUTION

Be sure the lid is closed before heating water. Lid will be warm to the touch after heating.




Spout

Pouring spout can also be used to fill the kettle. Just pour water directly into it, being careful not to fill too fast to avoid overflowing.



Filter

Filters out potential lime scale deposits to ensure clear water. Filter is removable for easy cleaning.

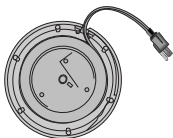

Base with Cord

Base allows cordless, 360° swivel access to the kettle for easy and safe use. Shorten or lengthen exposed cord by wrapping it inside the base. Be sure the cord exits the base through the cord opening.

PARTS AND FEATURES



Temperature Display

Displays the temperature you select; then displays the current temperature as water heats to your chosen setting.

Temperature Selector

Allows you to choose the water temperature desired for each use. Pre-programmed to heat water to any of five temperatures. Recommended temperatures for various uses are:

- 175°F (79°C)Green tea
- 185°F (85°C)White tea
- 195°F (91°C)Oolong tea
- 200°F (93°C)French press coffee
- 212°F (100°C)Black tea, herbal tea, pu-erh tea,
instant oatmeal, instant noodles



'Keep Warm' Feature

This feature will keep the water hot for 30 minutes.


Memory Feature

Automatically remembers last setting used while plugged in. To heat to the most recently programmed temperature, simply press the Start/Stop button. Kettle will resume heating and keep-warm functions even if kettle is removed from base for up to 2 minutes.



Water Level Window

Window is lighted for easy viewing and changes color as the temperature rises. Do not operate the kettle with less than 0.5 liters (2 cups) or more than 1.7 liters (7 cups) of water in it.

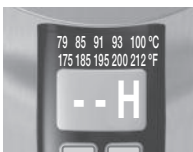

Boil-Dry Protection

Turns the kettle off if there is no water in it to prevent overheating. The display will flash "- - H." Simply remove the kettle from the base and fill with the desired amount of water.



Automatic Safety Shut-Off

Turns off the kettle after 5 minutes without use. To wake the kettle from standby, press any button or lift the kettle and then place it back on the base. When the kettle is lifted from the base, the heating function will pause. After kettle is returned to the base, press Start/Stop to resume heating.


BEFORE USING YOUR WATER KETTLE

Before using your water kettle for the first time



1. Remove all packaging material and any stickers, tags, or tape from the kettle and base.

2. Be sure the mesh filter is in place behind the pouring spout.

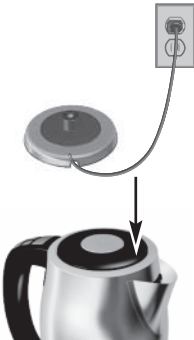

3. Place the base on a flat, level, and stable surface and insert plug into an approved electrical outlet.

4. Press center button to open lid. Fill kettle to the maximum level; press lid until it snaps closed. Place kettle on the base.

5. Press the temperature selector until the display shows 212°F; then press Start/Stop.

6. After the water has come to a boil, allow the water to cool to a safe temperature and discard. Your kettle is now ready for use.



USING YOUR WATER KETTLE

To Boil Water

1. Fill the kettle with water to the desired level (between the minimum and maximum).
2. Place the kettle on the base. Be sure the base is on a flat, level, stable surface and is plugged into an approved electrical outlet.
3. Press the temperature selector until

212°F is reached.

4. Press Start/Stop button. The actual temperature will be displayed as the kettle heats up.
5. When the water reaches 212°F, the kettle will beep and then shut off.
6. To turn the kettle off at any time during use, press the Start/Stop button.

USING YOUR WATER KETTLE, con't.

To Heat Water to Programmed Temperature

1. Fill the kettle with water to the desired level (between the minimum and maximum) and place kettle on the base.
2. Press the temperature selector until the desired temperature is reached. Blue dot will indicate the temperature you selected.
3. Press Start/Stop button. The actual temperature will be displayed as the kettle heats up.
4. When water reaches the selected temperature, the kettle will beep and then shut off. To turn the kettle off at any time during use, press the Start/Stop button.

To Use 'Keep Warm' Function

1. After selecting temperature, press

the Keep Warm button, then press Start/Stop. Kettle will keep water hot for 30 minutes after the selected temperature is reached. The Keep Warm button illuminates to indicate this feature is 'on.' Press Start/Stop again to turn off this function.

2. After 30 minutes with the kettle remaining on the base, a beep will indicate that the keep-warm time has ended. The 30 minutes will be reset if the kettle is lifted off the base and placed back within 2 minutes.
3. When 212°F is selected, the Keep Warm function will keep the water temperature below boiling. To bring it back up to 212°F, press the Start/Stop button twice. The kettle will beep to indicate that it has reached 212°F.

CARING FOR YOUR WATER KETTLE

To Clean Water Kettle

1. Always unplug the appliance before cleaning.
2. To clean kettle, rinse occasionally with clean water. Do not immerse in water.
3. To clean base, simply wipe with a damp cloth. Do not use abrasive detergents. Never rinse or immerse the base in water. If base has surface stains or spots, use a stainless steel cleaning agent.

To Clean Filter

1. Grasp filter and lift out.



2. Rinse under running water.
3. Place back in the kettle in original position.

To Decalcify Kettle Interior

Decalcifying is recommended regularly, depending on water hardness in your area.

1. Fill the kettle with water and decalcifier, according to decalcifier product instructions.
2. Do not boil, as solution may foam over.
3. When finished, rinse kettle thoroughly with fresh water.

REPLACEMENT PARTS

Frigidaire Accessories		Part No.
	Filter	H0901620000A
	Base	S09030300000

To order replacement parts in the U.S.A and Mexico, go to www.frigidaire.com/professional

To order replacement parts in Canada, go to www.frigidaire.ca

You may also call **1-888-845-7330** to order parts or for answers to problems or questions.

Phone hours are Monday-Friday, 9 a.m.-8:30 p.m. EST;
Saturday-Sunday, 11 a.m.-7.30 p.m. EST.

For pricing, see www.frigidaire.com/professional
or call **1-888-845-7330**

PROBLEM SOLVING

Problem	Possible Cause	Solutions
Kettle turns off before boiling.	Lime scale buildup inside kettle.	Decalcify kettle interior. See p. 7.
Kettle does not turn off.	Lid not locked or filter not in place.	Press down lid until it snaps shut. Check to be sure filter is in proper position.
Kettle does not turn on.	Kettle has not cooled down sufficiently after operating with small amount of water.	Allow kettle to cool and try again.

SMALL DOMESTIC APPLIANCE WARRANTY

Your appliance is covered by a **one year limited warranty**. For one year from your original date of purchase, Electrolux will repair or replace the appliance or parts, at Electrolux's option, that prove to be defective in materials or workmanship when the appliance is installed, used, and maintained in accordance with the provided instructions. Labor and all costs associated with returning the appliance or parts to us and our returning the appliance or parts to you are excluded under this warranty. As a matter of warranty policy, Electrolux will not refund the consumer's purchase price. If a product or part under warranty is no longer available, Electrolux will replace with a comparable product of equal or greater value.

Exclusions: This warranty does not cover the following:

- Products with original serial numbers that have been removed, altered or cannot be readily determined.
- Products that have been transferred from the original owner to another party or removed outside the USA or Canada.
- Rust on the interior or exterior of the unit.
- Products purchased "as-is."
- Food loss due to product failure.
- Products used in a commercial setting or anything but single family household use.
- Labor or service visits under any circumstance.
- Glass parts or containers, filters, non-stick surfaces.
- Ordinary wear and tear.
- Damages caused by improper use, installation, or service; use of parts other than genuine Electrolux parts; negligence; abuse; misuse; inadequate or excessive power supply; accidents; fires; or acts of God. Keep your receipt or some other appropriate payment record to establish the warranty period. Should warranty service be required, you must show proof of purchase.

If You Need Service:

To obtain warranty service in the USA or Canada, call 1-888-845-7330. Please have the model number, serial number, and date of purchase information available.

SMALL DOMESTIC APPLIANCE WARRANTY

DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES:

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE, AT ELECTROLUX'S SOLE DISCRETION, PRODUCT OR PART REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

This warranty only applies to products purchased in the USA and CANADA. In the USA, your appliance is warranted by Electrolux Home Care Products, Inc. In Canada, your appliance is warranted by Electrolux Home Care Products Canada Inc. Electrolux authorizes no person to change or add to any obligations under this warranty. Product features or specifications as described or illustrated are subject to change without notice.

USA

1-888-845-7330

Electrolux Home Care Products, Inc.

10200 David Taylor Drive

Charlotte, NC 28262

CANADA

1-888-845-7330

Electrolux Home Care Products Canada Inc.

5855 Terry Fox Way

Mississauga, ON, Canada L5V 3E