




A technical drawing of a chimney-style hood, showing a perspective view of the hood's structure. It features a curved top and a horizontal base with several mounting points. The drawing is set against a grid background.

Prizer Hoods

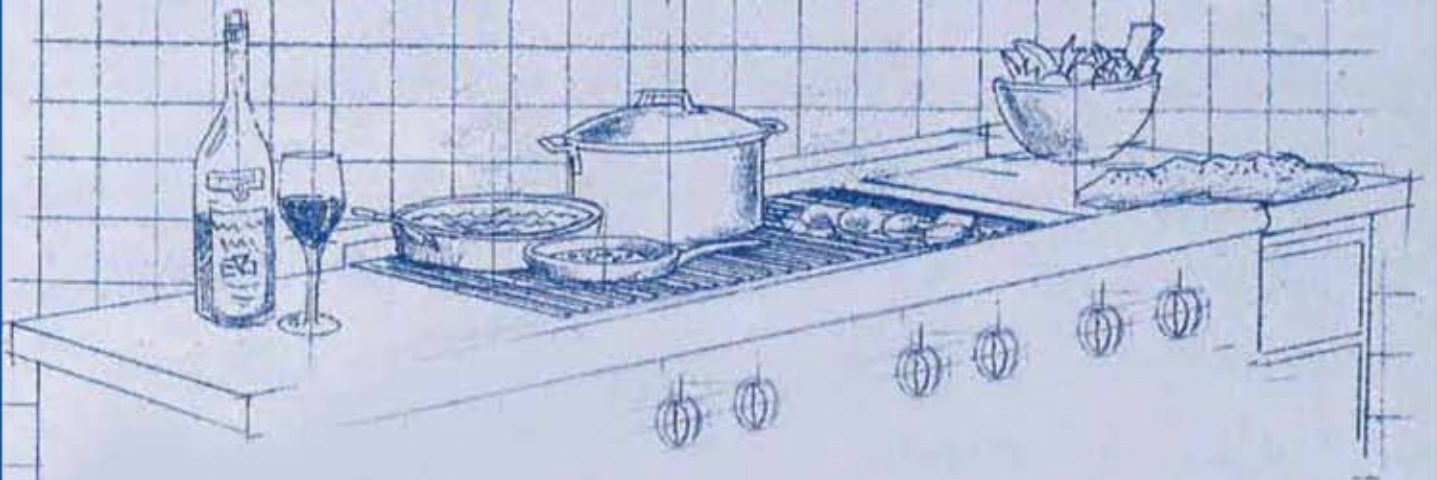

INSTALLATION INSTRUCTIONS

***Chimney-Style Hoods
Indoor & Outdoor Applications***

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
SAFETY PROCEDURES	3
PRECAUTIONS FOR RECEIVING AND STORING HOOD	3
<hr/>	
INSTALLATION PLANNING	4
INSTALLING CHIMNEY STYLE HOODS	5
ROUGH-IN DIMENSIONS FOR CHIMNEY STYLE HOODS	6
INSTALLING CHIMNEY STYLE HOODS (CONTINUED)	7
<hr/>	
AN ALTERNATE INSTALLATION FOR A CHIMNEY STYLE HOOD	8
<hr/>	
INSTALLING A CHIMNEY STYLE HOOD WITH A REAR DISCHARGE THROUGH THE DUCT COVER	9
INSTALLING A CFM600 FAN IN A 30" WIDE CHIMNEY STYLE HOOD	10
WIRING A REMOTE FAN	11
WIRING DIAGRAM FOR CHIMNEY STYLE HOODS	12
CFM600 FAN - CHIMNEY / ISLAND APPLICATION - 8" TRANSITION	13
CFM1200 FAN - CHIMNEY / ISLAND APPLICATION - 10" TRANSITION	14
<hr/>	
HOOD FEATURES	15
BAFFLE FILTERS - GREASE TROUGHS - HALOGEN LIGHTS	16
CLEANING RECOMMENDATIONS	17
TROUBLE-SHOOTING TIPS	18

**PLEASE READ COMPLETE INSTRUCTIONS BEFORE PROCEEDING.
INSTALLATION MUST COMPLY WITH ALL LOCAL CODES.**

IMPORTANT: Save these instructions for the Local Electrical Inspector's use.
INSTALLER: Please leave these instructions with this unit for the owner.
OWNER: Please retain these instructions for future reference.
SAFETY Turn power circuit OFF at the service panel and lock panel door
WARNING: before wiring this unit.

IMPORTANT SAFETY INSTRUCTIONS

CAUTION - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PEOPLE, OBSERVE THE FOLLOWING:

1. Use this rangehood only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer - Prizer Hoods.
2. Before servicing or cleaning the unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, attach a tag to the service panel to indicate power has been switched off for maintenance.
3. Install this rangehood only with remote fan models rated maximum 12.8A or in-hood fans manufactured by Prizer Hoods, models CFM300, CFM600, CFM1200.

CAUTION - TO REDUCE THE RISK OF A RANGETOP GREASE FIRE:

1. Never leave cooktop surface unattended while on high setting.

Boilovers cause smoke and greasy spillovers may ignite. Heat oils slowly on low or medium settings.
2. Hood fan should always be **ON** when cooking on high heat or when flambeing foods (i.e. Crepes Suzette, Cherries Jubilee, Peppercorn Beef Flambe.)
3. Clean in-hood fans frequently. Do not allow grease to accumulate on fan or baffle filters.
4. Always use cookware appropriate for the size of the surface element.

CAUTION - TO REDUCE THE RISK OF INJURY TO PEOPLE, IN THE EVENT OF A RANGETOP GREASE FIRE, OBSERVE THE FOLLOWING:

1. **SMOTHER FLAMES** with a tight-fitting lid, cookie sheet, or other metal tray. Immediately turn the gas burner OFF.
2. **PREVENT BURNS.** If gas flames do not extinguish immediately; **EVACUATE AND CALL THE FIRE DEPARTMENT.**
3. **NEVER PICK UP A FLAMING PAN** as you may sustain burns.
4. **NEVER USE WATER,** wet dish-cloths or towels as a violent steam explosion will occur.
5. Use fire extinguisher **ONLY** if:
 - You know you have a class ABC extinguisher, and you already know how to operate it.
 - The fire is small and contained in the area where it started.
 - The fire department is being called.
 - You can fight the fire with your back to an exit.

CAUTION: FOR GENERAL VENTILATION USE ONLY. DO NOT USE TO EXHAUST HAZARDOUS OR EXPLOSIVE MATERIALS OR VAPOR.

SAFETY PROCEDURES FOR INSTALLING YOUR NEW PRIZER HOOD (continued)

CAUTION - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PEOPLE, OBSERVE THE FOLLOWING:

CAUTION - FOR GENERAL VENTILATION USE ONLY. DO NOT USE TO EXHAUST HAZARDOUS OR EXPLOSIVE MATERIALS OR VAPORS.

- A. Installation work and electrical wiring must be done by a qualified installer in accordance with all applicable codes and standards, including fire rated construction.
- B. Sufficient air is needed for proper combustion and gas exhaustion through the flue (duct cover) of fuel burning cooktop to prevent backdrafting. Follow the equipment manufacturer's guidelines and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- C. When cutting/drilling into a wall or ceiling, avoid damage to electrical wiring and other hidden utilities.
- D. In-hood or in-line fans must be vented to the outdoors.
- E. If a ventilation unit is to be installed over a tub or shower, it must be marked as appropriate for the application and be connected to a GFCI (Ground Fault Circuit Interrupter) - protected branch circuit.
- F. NEVER place a control switch where it can be reached from a tub or shower.
- G. **CAUTION - TO REDUCE THE RISK OF FIRE WITHIN WALLS OR ROOFS, USE ONLY METAL DUCTWORK.**
- H. Install this hood in accordance with all requirements specified by the manufacturer of your cooktop/range.
- I. Install this hood using required clearance from cooking surface to combustible material specified in cooktop installation instructions.

READ AND SAVE

UPON RECEIVING YOUR HOOD...

- The high degree of craftsmanship in the construction and finish of your hood requires careful handling to ensure proper installation.
- Do not remove your hood from its carton until you are ready to hang it.
- Do not store your hood anywhere other than within the carton. If it is necessary to remove your hood from the carton, place it on a blanket or padded area that will protect your hood from scratches or indentations.
- Do not lift the hood by its utensil rail. Place your fingers under the lower reveal of the hood. Grasp firmly and lift.
- Wearing cotton gloves are preferred. They will protect the surface from fine scratches and eliminate fingerprints.
- Remove all rings, watches, belt buckles, and jackets (snaps-zippers) to prevent scratches on the hood.
- If applicable, do not remove the cotton flannel from your hood until the installation process is complete. It will be necessary to remove only a small portion on the back-side for a wall mounted hood in order to position in place.
- Located within the hood cavity (behind the baffle filters) are component parts and halogen bulbs.

INSTALLATION PLANNING

CHECK THE INSTALLATION LOCATION

- If your installation has been roughed-in (including duct work and wiring), be certain there is nothing in the way of the mounting, pipes, other wiring, etc.
- If the installation has not been roughed-in, check what is needed to create the framing and mounting hardware (allthreads, nuts, etc.). Be sure the location will not interfere with wiring, other utilities, or structural considerations.

CHOOSE THE INSTALLATION METHOD

- There are several different methods available to mount the hood: the Unistrut, Angle Iron, Frame In, Wall Mounts, Island Mount and Rough-In Plate Mount, which can be used for both indoor and outdoor. Please check the model options for the suggested methods of your installation. Each hood type and site requirements are presented as follows.
- Please read the instructions in their entirety prior to installing the hood.

CHIMNEY STYLE HOODS INCLUDE AN INSTALLATION PACKAGE WITH THE FOLLOWING COMPONENT PARTS:

- **Ten 10-24 Nuts**
- **Ten #10 Self-Tapping Screws - 2" long**
- **One Fan Control Knob**
- **One Light Control Knob**
- **One 10" Square-to-Round Transition w/damper for hoods 36" - 66" wide**
- **One 8" Square-to-Round Transition w/damper for hoods 30" wide**
- **Transitions are mounted upside-down within interior of hood**

Chimney Hoods include a standard duct cover (standard heights). Duct covers are included when ordered with the hood. Duct covers are shipped separately. Standard increment heights include: 12" tall, 18" tall, 24" tall, 30" tall, 36" tall, 42" tall and 48" tall. Included with the duct cover is the following hardware:


Eight 12-24 Self-Tapping Screws - 7/8" long

Four 5/16" by 1" Bolts

CONNECTING DUCT WORK


Ducting should be as short and straight as possible for best fan performance.
SEAL ALL JOINTS WITH DUCT TAPE.

INSTALLING CHIMNEY STYLE HOODS



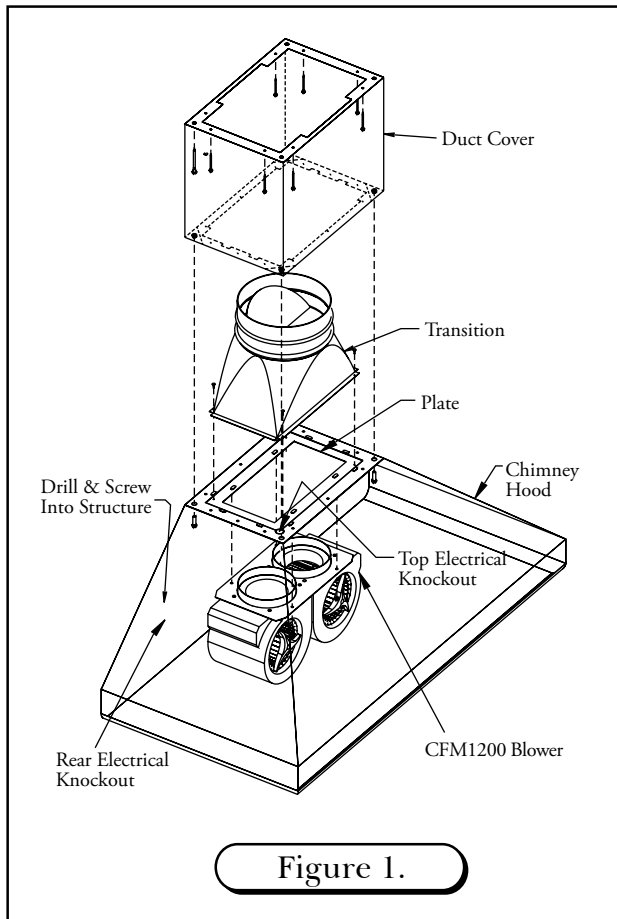


1. Position the Chimney hood on its back and locate the transition inside the Chimney hood; remove the (4) #8 x 1/2" self tapping screws at the top of the hood which hold the transition to the hood (save these screws for later use), separate the transition from the hood base and duct cover.
2. Install the transition to the duct work ensuring the bottom of the transition is centered and flush with the bottom of the Duct Cover. Check the position of the transition by sliding the Duct Cover over the mounted transition. Verify that the transition is flush, and centered to the bottom of the Duct Cover. When transition installation is complete, be sure to check that the damper is not hindered from opening if using mechanical fasteners. (see Figure 5. - Page 7)
3. If the Electrical feed extends from the ceiling, remove the knockout at the top of the hood prior to installing the Duct Cover in order to facilitate feeding the Romex down into the hood cavity to the electrical box. (see Figure 2.)


4. Install the Duct Cover to the top of the hood using the 12-24 self tapping 7/8" length screws. Also bolt the hood to the Duct Cover using the supplied stainless steel 5/16" bolts.
5. Before hanging the hood, drill holes in the back of the hood, if necessary, to line up with the structural studs in the wall. Also, be prepared when hanging the hood to feed the electrical either through the top down, or use the knockout provided in the back. You may drill a hole in the back, if necessary, to accommodate the electrical. (see Figure 2.)
6. Slide the Hood up the wall with the transition sliding inside the Duct Cover, then secure the hood to the back wall (drilling through the back of the hood to locate studs). Use the #10 x 2" long self-tapping screws to secure the hood to the wall structure. (see Figure 6. - Page 7)
7. Once the Hood is secure, attach the transition to the rectangular plate at the junction of the hood and Duct Cover with the screws that were removed from the transition. (see Figure 6. - Page 7)

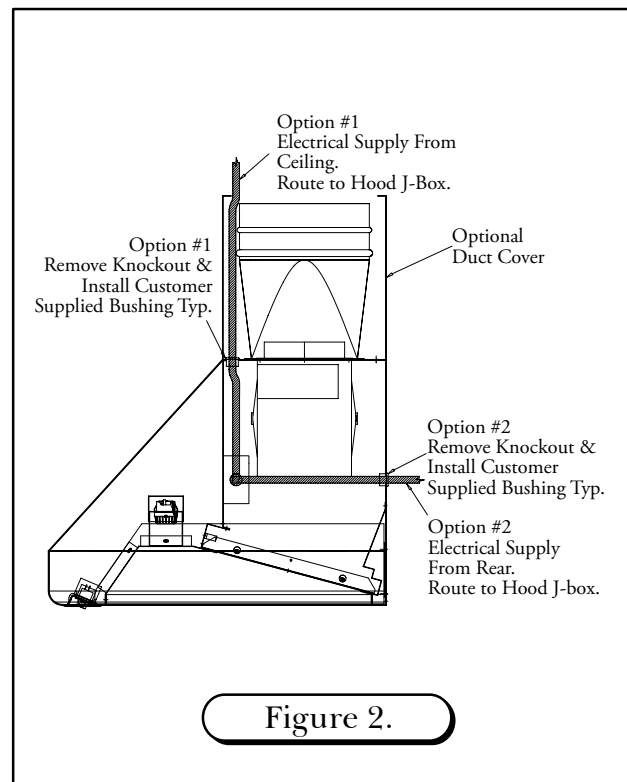

ROUGH-IN DIMENSIONS FOR CHIMNEY STYLE HOODS

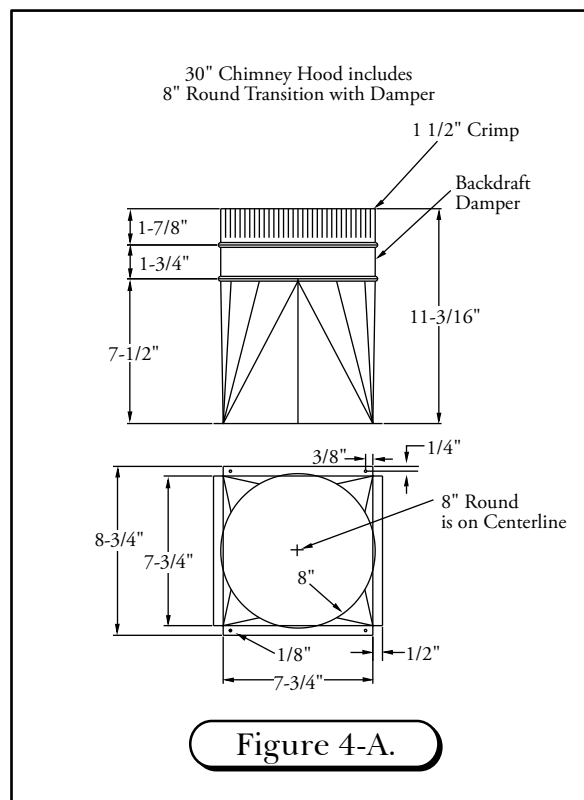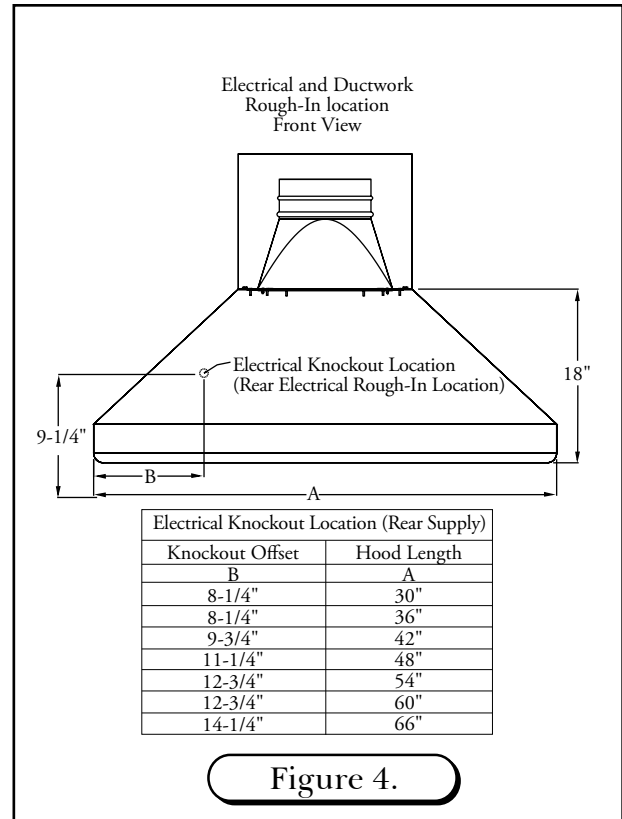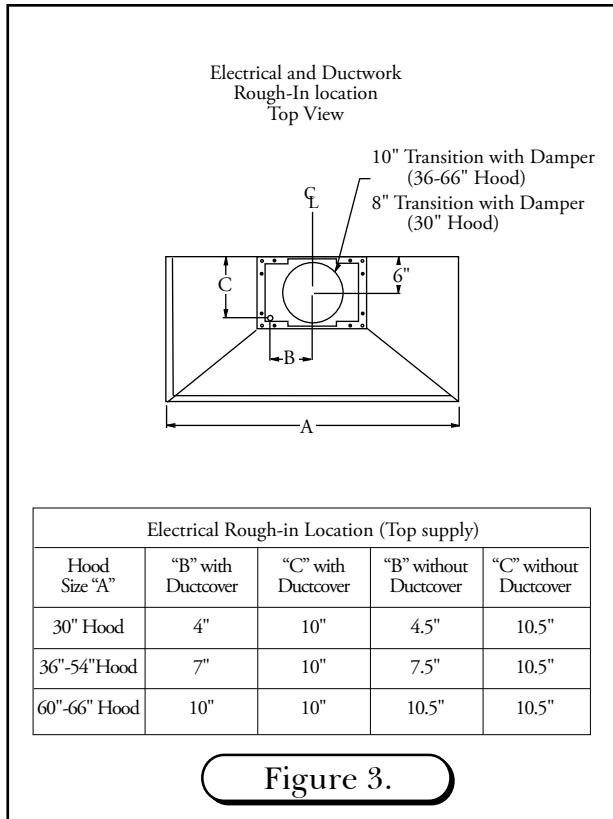



INSTALLING CHIMNEY STYLE HOODS - (continued)

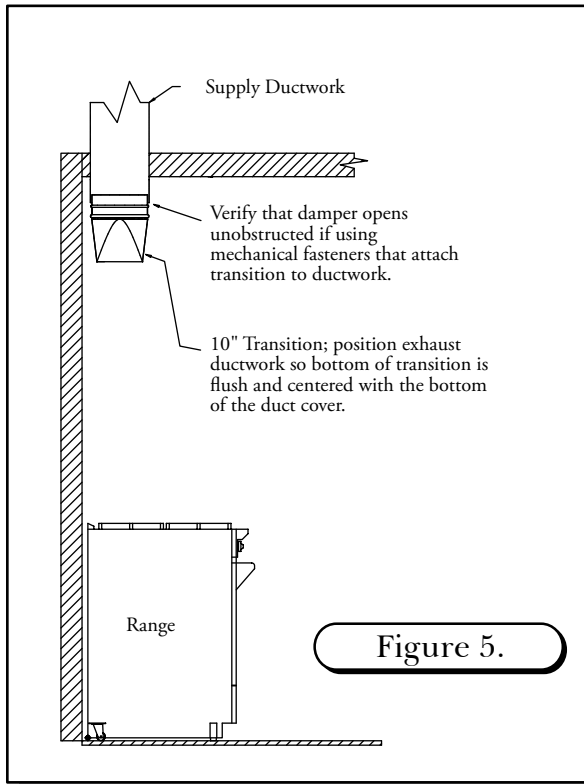


8. Electrician may complete electrical connection to Hood making the connection at the box inside the hood. (120 volt) (see Figure 2. - Page 4). If using a remote fan please see section "Wiring a Remote Fan". (see Page 11)
9. If using an in-hood CFM1200 or CFM600 fan, slide the fan mount over the studs at the junction of the hood and Duct Cover and use the 10-24 nuts supplied to attach the fan to the hood. (see Figure 10.)

IMPORTANT! If installing a 30" wide chimney style hood, please see the instructions for mounting a CFM600 in-hood fan. (see Page 9)

10. Plug the electrical "Y" pigtail into each of the fans and the other single end into the hood Molex connector. (see Figure 10. - Page 8)

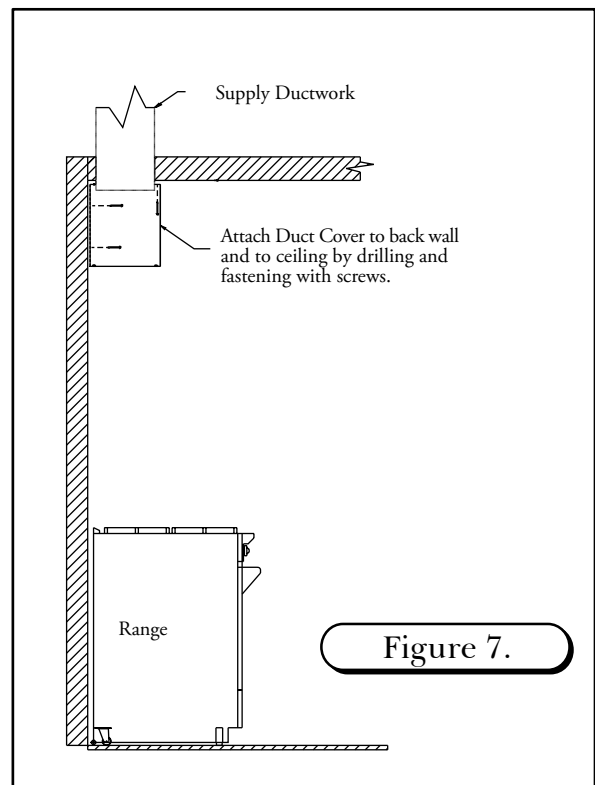
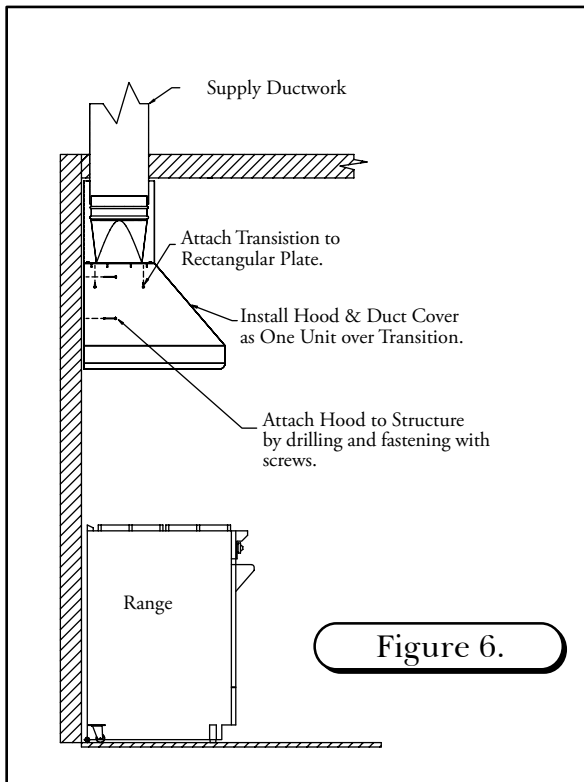


AN ALTERNATE INSTALLATION FOR A CHIMNEY STYLE HOOD

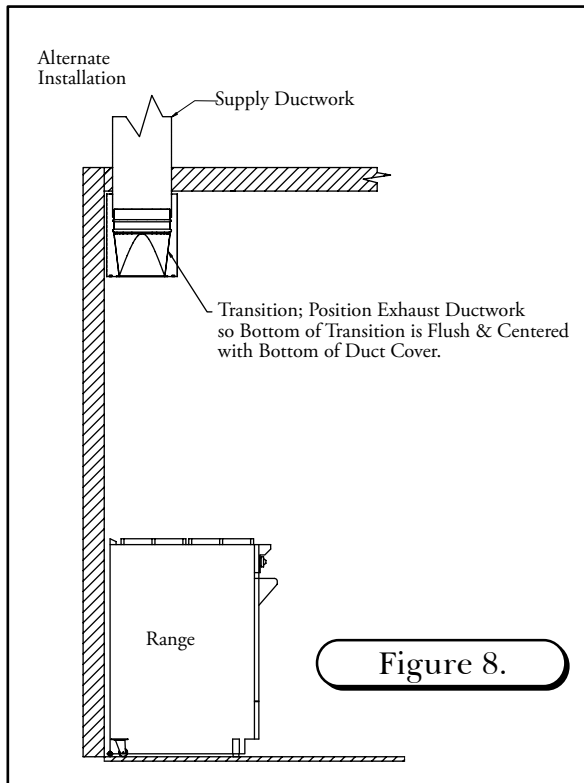

In certain situations the installer may opt for a different installation sequence. The alternate sequence is listed below.

1. Drill holes in back of Duct Cover to align with structural members; fasten Duct Cover to wall using supplied #10 x 2" self tapping screws; attach duct cover through ceiling opening in top of structure, if available. (see Figure 7. - Page 6)
2. Install Transition to ductwork, ensuring transition bottom is centered and flush with bottom of Duct Cover (in most cases you will not be able to mechanically fasten transition to ductwork. If mechanical fasteners are used, apply duct tape to hold transition in place until hood is mounted. This may be followed by a small amount of silicone at the connection of the transition to ductwork). (See Figure 8.)
3. Attach the Hood to the Duct Cover. Fasten the Hood to back wall (drilling through the back of the Hood and Duct Cover to locate studs). (See Figure 9.)
4. Continue installation with sequence #7 of standard installation instructions, on page 6

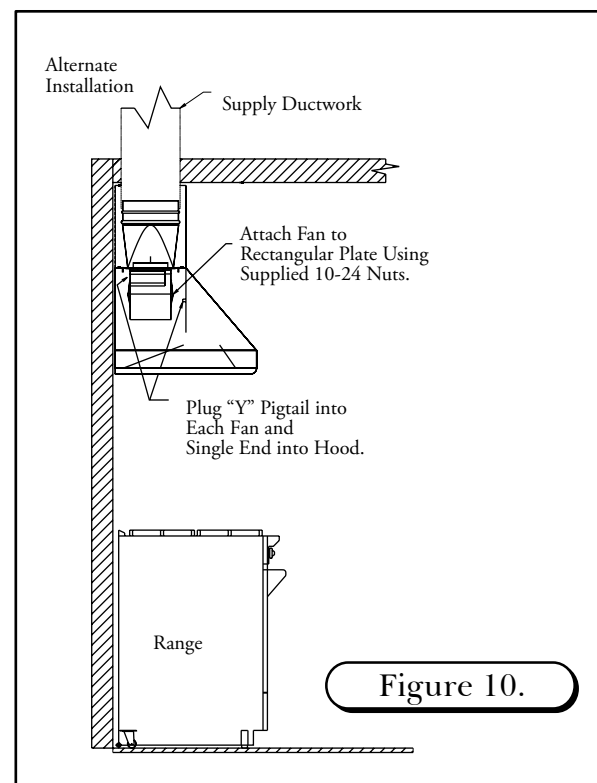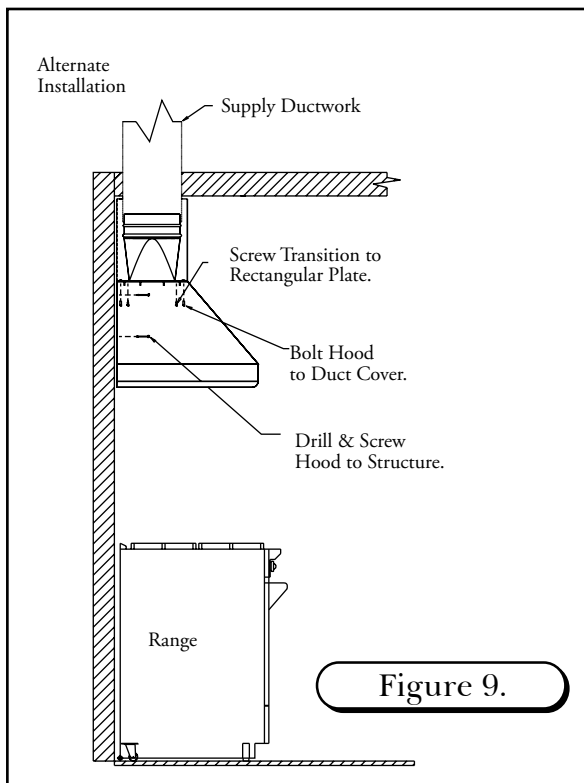


INSTALLING A CHIMNEY STYLE HOOD WITH A REAR DISCHARGE THROUGH DUCT COVER

The Chimney Style Hood can adapt to a rear discharge application but with the following limitations:

A rear discharge application only works when using a 24" tall duct cover or taller. The 12" and 18" tall duct covers do not allow enough room to house the transition (with damper) and an elbow. The rear discharge cannot be made within the hood itself. It can only be made in the duct cover.

Remove the screws from the back of the duct cover, followed by removing the rear panel of the duct cover. This will allow the ducting to exit from the rear of the duct cover. (see Figure 11.)

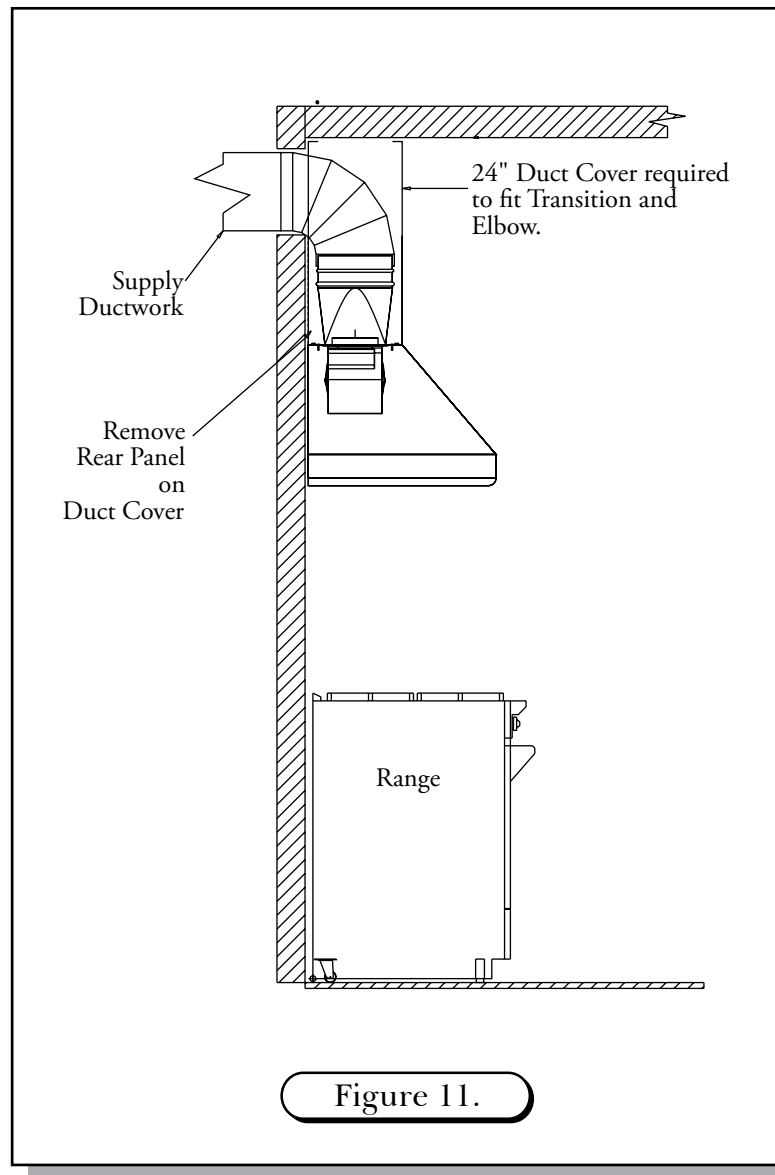


INSTALLING A CFM600 FAN IN A 30" WIDE CHIMNEY STYLE HOOD

These instructions are only applicable when installing a CFM600 fan in a 30" wide chimney style hood.

The Prizer 30" wide chimney style hood has an adapter plate installed inside the hood. In order to install a CFM600 fan within a 30" wide chimney style hood, first remove this adapter plate, and use this plate in lieu of the plate shipped with the CFM600 fan.

1. Remove the adapter plate from the 30" wide chimney style hood by removing the four (4) 10-24 nuts. (see Figure 12.)
2. Unpack the CFM600 fan (shipped separately).
3. Remove the CFM600 fan from the mounting plate, by removing the four (4) screws holding the fan to the plate.
4. Attach the CFM600 fan to the adapter plate previously removed from the 30" wide chimney style hood.
5. Insert the CFM600 fan unit into the 30" wide chimney style hood using the previously removed four (4) 10-24 nuts.

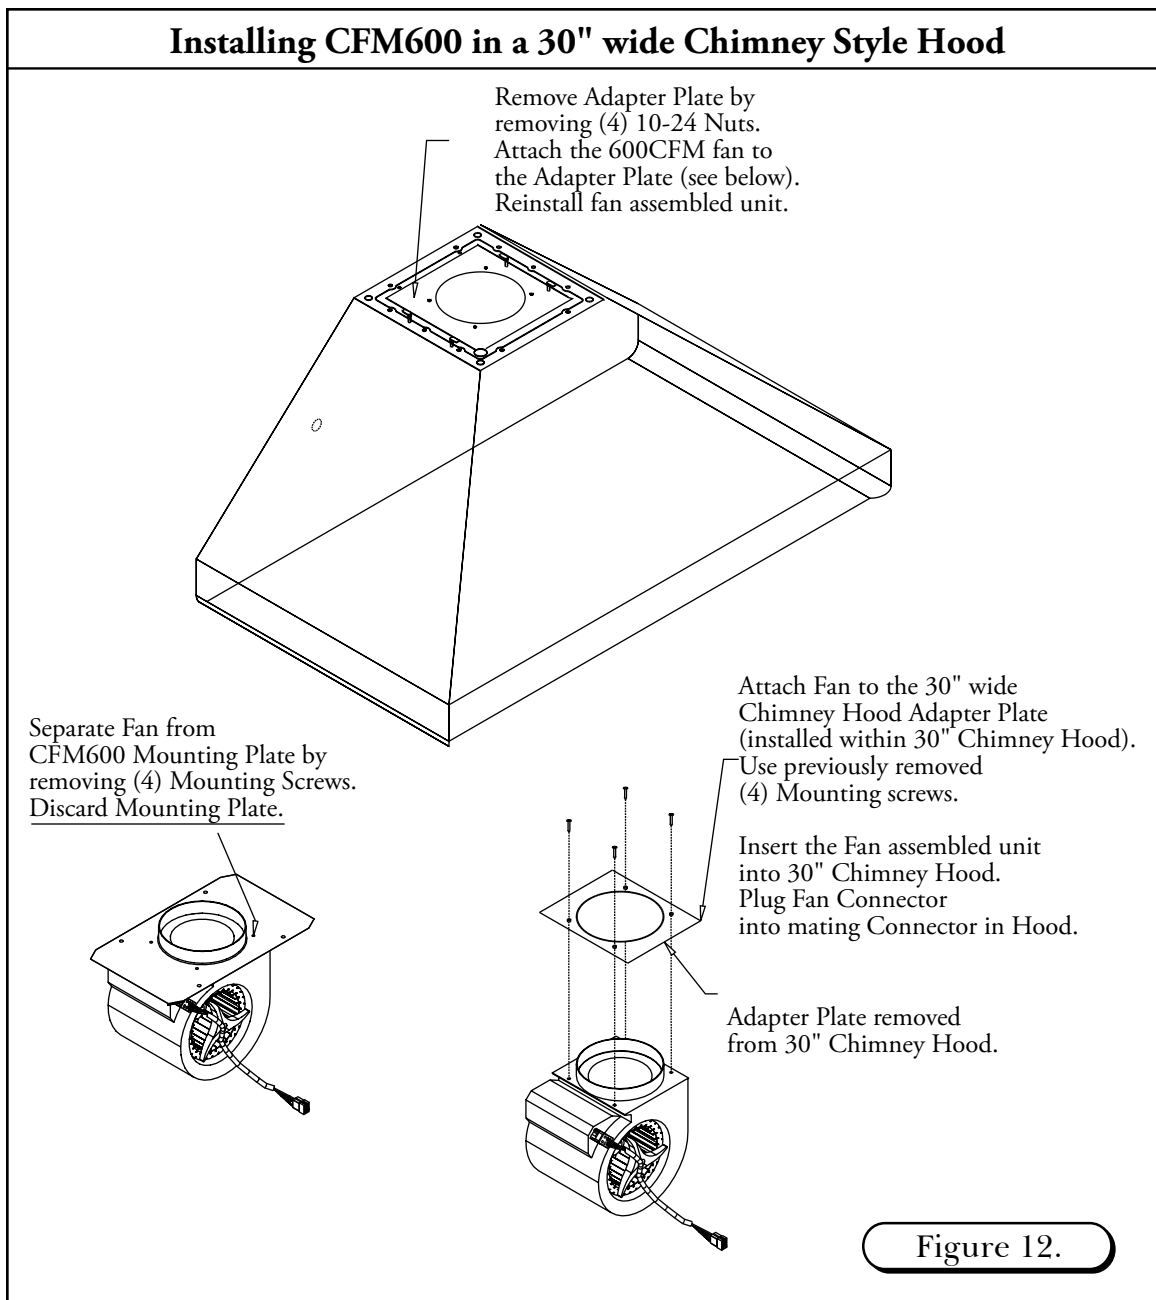


WIRING A REMOTE FAN

When using a remote fan with a chimney style hood, follow the instructions noted below.

NOTE: The chimney style hood is designed to accept a 3-speed fan motor only. It not designed to accept a variable speed fan!

1. The molex plug mounted within the front portion of the hood supplies power to the remote fan.
2. Connect the “male” molex pigtail (included) with the remote fan to the molex plug.
3. Route the wire ends into the hood’s “J-Box”.
4. Connect these wires to the remote fan wires within the hood’s “J-Box”. (see Figure 13.)
5. If using a remote fan for a 30” wide chimney style hood, remove and discard the adapter plate. (see Figure 12. - Page 10)





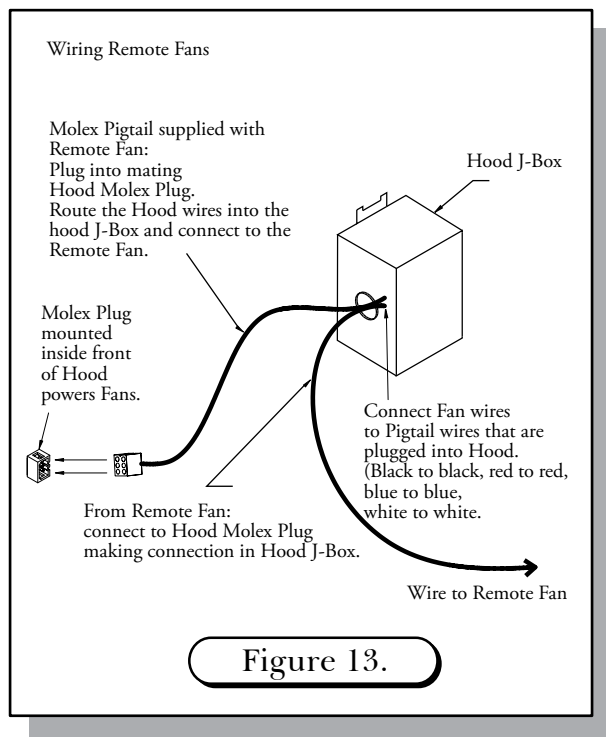


HIGH-HEAT SENSOR

A HIGH-HEAT SENSOR is integral to the complete line of Pirzer hoods. It is activated when the exhaust temperature reaches 200°F (93°C) and de-activates as the temperature decreases to 186°F (85°C). If the fan is operating on the LOW SPEED, and the HIGH-HEAT SENSOR engages, the fan motor will automatically change to HIGH SPEED until the temperature decreases.


WIRING DIAGRAM FOR CHIMNEY STYLE HOODS

WIRING DIAGRAM FOR CHIMNEY STYLE HOODS

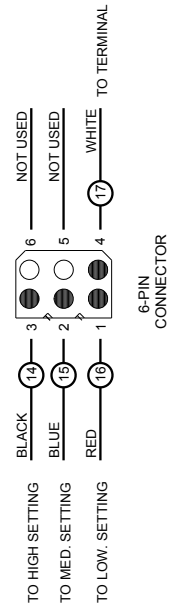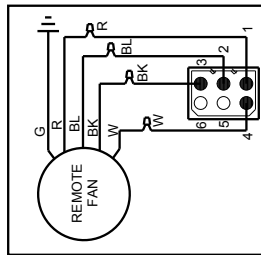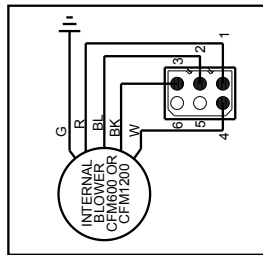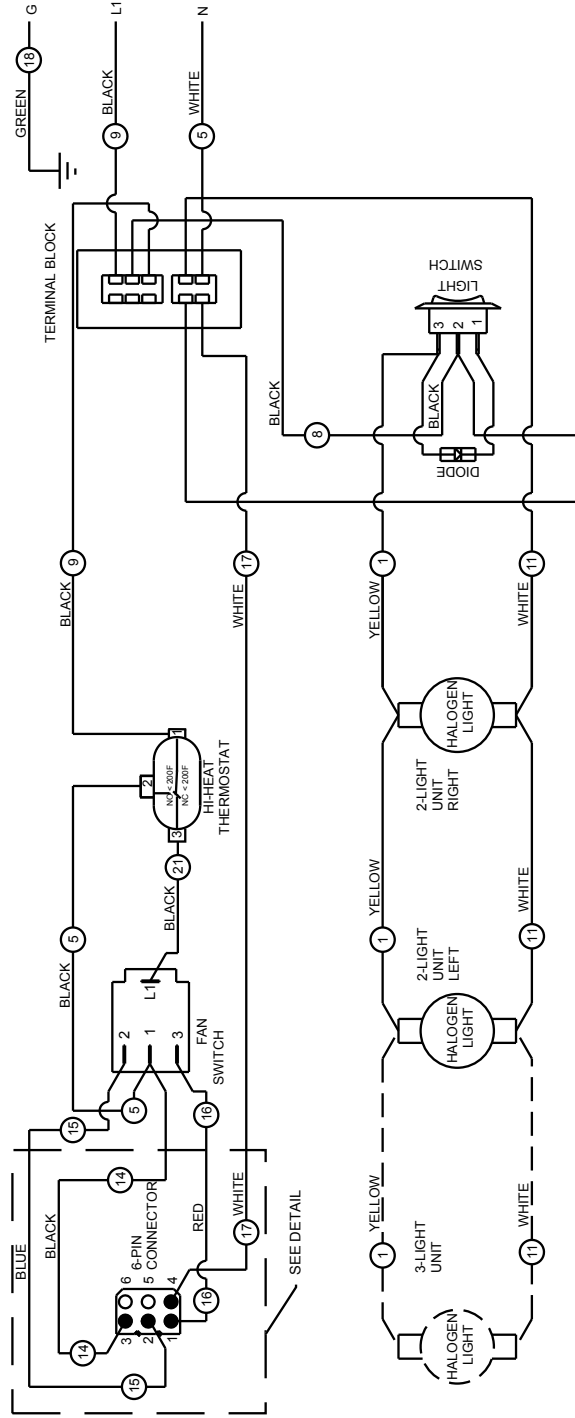


CFM 600 IN-HOOD FAN

CHIMNEY AND ISLAND APPLICATION - 8" TRANSITION

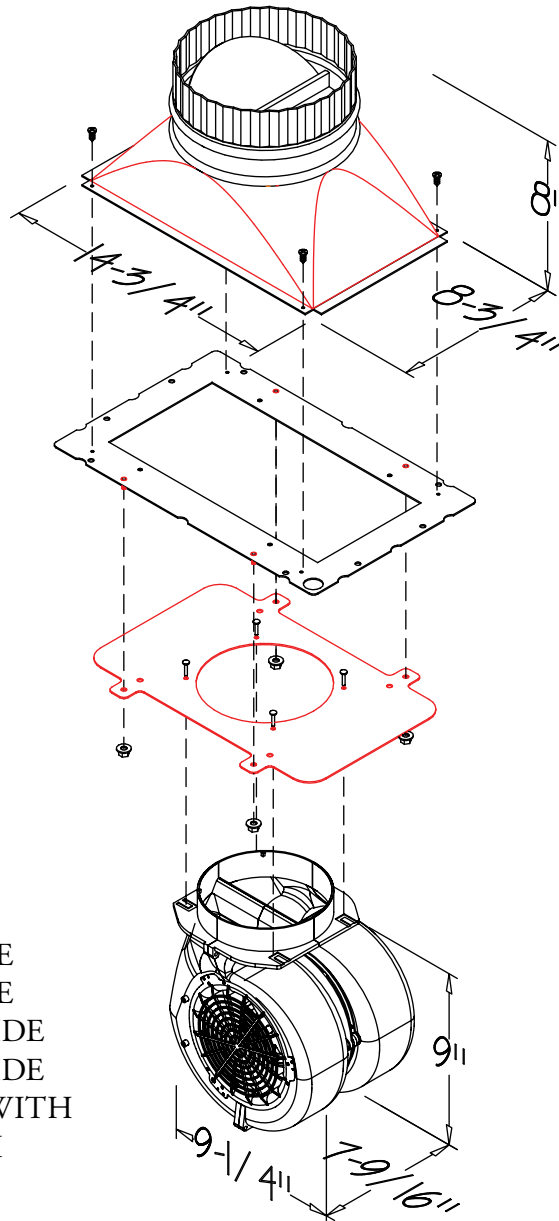


EXCEPTION:

- MANHATTAN WALL 36" WIDE
 - MANHATTAN WALL 42" WIDE
 - MANHATTAN ISLAND 36" WIDE
 - MANHATTAN ISLAND 42" WIDE
- THE ABOVE MUST BE USED WITH AN 8" ROUND COLLAR WITH BACKDRAFT DAMPER

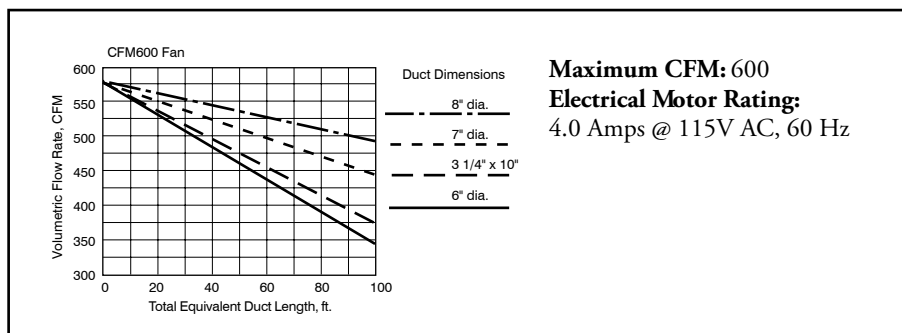


CFM 1200 IN-HOOD FAN

CHIMNEY AND ISLAND APPLICATION - 10" TRANSITION

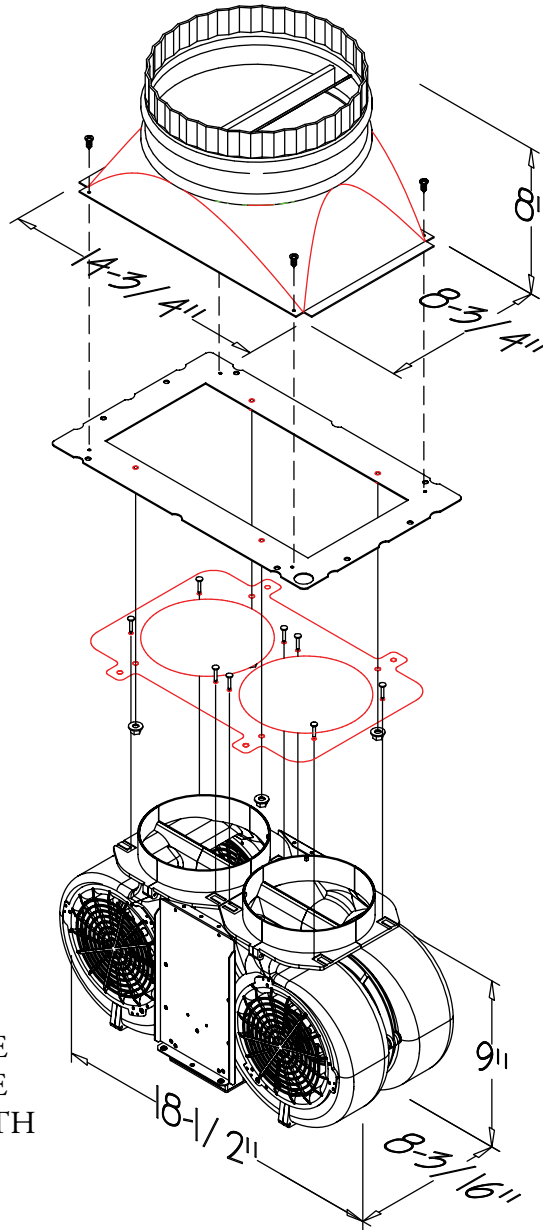

EXCEPTION:

- MANHATTAN WALL 36" WIDE
 - MANHATTAN WALL 42" WIDE
 - MANHATTAN ISLAND 36" WIDE
 - MANHATTAN ISLAND 42" WIDE
- THE ABOVE MUST BE USED WITH AN 8" ROUND COLLAR WITH BACKDRAFT DAMPER

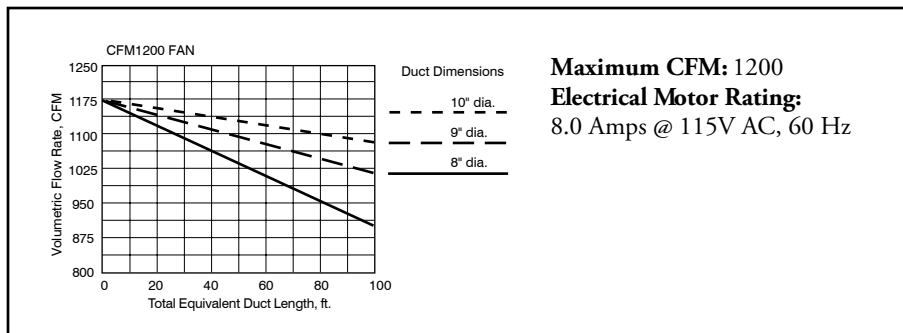

HOOD FEATURES

Model	Lighting	Filters	Available Widths								Depth	Height
WALL HOODS	Halogen & Heat		NUMBER OF FILTERS PER WIDTH									
LP 30" - 42"	Halogen 2	THIN BAFFLES	30"	36"	42"	48"	54"	60"	66"	22"	18"	
LP 48" - 66"	Halogen 3	THIN BAFFLES	2	2	2	3	3	4	4			
INCL 30" - 42"	Halogen 2	THICK BAFFLES	30"	36"	42"	48"	54"	60"	66"	24"	18"	
INCL 48" - 66"	Halogen 3	THICK BAFFLES	2	2	3	3	4	4	5			
INBQ 30" - 42"	Halogen 2	THICK BAFFLES	2	2	3	3	4	4	5	27"	18"	
INBQ 48" - 66"	Halogen 3	THICK BAFFLES	30"	36"	42"	48"	54"	60"	66"	30"	33"	
				4	6	6	8	8	10			
BONZ 30" - 42"	Halogen 2	THICK BAFFLES	30"	36"	42"	48"	54"	60"	66"	24"	18"	
BONZ 48" - 66"	Halogen 3	THICK BAFFLES	2	2	3	3	4	4	5			
CONN 30" - 42"	Halogen 2	THICK BAFFLES	30"	36"	42"	48"	54"	60"	66"	24"	18"	
CONN 48" - 66"	Halogen 3	THICK BAFFLES	2	2	3	3	4	4	5			
ASPEN 30" - 42"	Halogen 2	THICK BAFFLES	30"	36"	42"	48"	54"	60"	66"	24"	18"	
ASPEN 48" - 66"	Halogen 3	THICK BAFFLES	2	2	3	3	4	4	5			
SNFE-10" TALL 30" - 42"	Halogen 2	THIN BAFFLES	30"	36"	42"	48"	54"	60"	66"	22"	10"	
SNFE-10" TALL 48" - 66"	Halogen 3	THIN BAFFLES	2	2	2	3	3	4	4			
SNFE-18" TALL 30" - 42"	Halogen 2	THICK BAFFLES	30"	36"	42"	48"	54"	60"	66"	24"	18"	
SNFE-18" TALL 48" - 66"	Halogen 3	THICK BAFFLES	2	2	3	3	4	4	5			
LONDON FLAT 36" - 42"	Halogen 2	MESH FILTERS		36"	42"	48"	54"	60"	66"	24"	18"	
LONDON FLAT 48" - 66"	Halogen 3	MESH FILTERS		2	3	4	5	6	7			
ISLAND												
HAMPTON-I 36" - 42"	Halogen 2	THICK BAFFLES		36"	42"	48"	54"	60"	66"	34"	18" NOT INCLUDING DUCT COVER	
HAMPTON-I 48" - 66"	Halogen 3	THICK BAFFLES		4	6	6	8	8	10			
LARA-I 36" - 42"	Halogen 2	THICK BAFFLES		36"	42"	48"	54"	60"	66"	34"	18" NOT INCLUDING DUCT COVER	
LARA-I 48" - 66"	Halogen 3	THICK BAFFLES		4	6	6	8	8	10			
LARE-I 36" - 42"	Halogen 2	THICK BAFFLES		36"	42"	48"	54"	60"	66"	34"	18" NOT INCLUDING DUCT COVER	
LARE-I 48" - 66"	Halogen 3	THICK BAFFLES		4	6	6	8	8	10			
MANH-I 36" - 42"	Halogen 4	THICK BAFFLES		36"	42"	48"	54"	60"	66"	34"	6" NOT INCLUDING DUCT COVER	
MANH-I 48" - 66"	Halogen 6	THICK BAFFLES		4	6	6	8	8	10			
WRAN-I 36" - 42"	Halogen 2	THICK BAFFLES		36"	42"	48"	54"	60"	66"	34"	18" NOT INCLUDING DUCT COVER	
WRAN-I 48" - 66"	Halogen 3	THICK BAFFLES		4	6	6	8	8	10			
CHIMNEY												
HAMPTON 30" - 42"	Halogen 2	THICK BAFFLES	30"	36"	42"	48"	54"	60"	66"	24"	18" NOT INCLUDING DUCT COVER	
HAMPTON 48" - 66"	Halogen 3	THICK BAFFLES	2	2	2	3	3	4	4			
LARA 30" - 42"	Halogen 2	THICK BAFFLES	30"	36"	42"	48"	54"	60"	66"	24"	18" NOT INCLUDING DUCT COVER	
LARA 48" - 66"	Halogen 3	THICK BAFFLES	2	2	2	3	3	4	4			
LARE 30" - 42"	Halogen 2	THICK BAFFLES	30"	36"	42"	48"	54"	60"	66"	24"	18" NOT INCLUDING DUCT COVER	
LARE 48" - 66"	Halogen 3	THICK BAFFLES	2	2	2	3	3	4	4			
MANH 36" - 42"	Halogen 2	THICK BAFFLES		36"	42"	48"	54"	60"	66"	24"	18" NOT INCLUDING DUCT COVER	
MANH 48" - 66"	Halogen 3	THICK BAFFLES		2	3	3	4	4	5			
WRAN 36" - 42"	Halogen 2	THICK BAFFLES		36"	42"	48"	54"	60"	66"	24"	20" NOT INCLUDING DUCT COVER	
WRAN 48" - 66"	Halogen 3	THICK BAFFLES		2	3	3	4	4	5			
LINERS												
CMLSS (all sizes)	Halogen 2	MESH FILTERS			29"	38"	47"			15 ¹³ / ₁₆ "	11 ¹ / ₈ "	
					2	2	3					
MLSS 28"	Halogen 2	THICK BAFFLES										
MLSS 34" - 46"	Halogen 2	THICK BAFFLES	28"	34"	40"	46"	52"	58"	64"	70"	19 ¹ / ₄ "	
MLSS 52" - 70"	Halogen 3	THICK BAFFLES	2	2	3	3	4	4	5	5	14"	
PMLSS 28"	Halogen 2	THICK BAFFLES										
PMLSS 34" - 46"	Halogen 2	THIN BAFFLES	28"	34"	40"	46"	52"	58"	64"	70"	22 ¹ / ₂ "	
PMLSS 52" - 70"	Halogen 3	THIN BAFFLES	2	2	2	3	3	4	5	5	12"	
MLFS 30" - 42"	Halogen 2	THICK BAFFLES	30"	36"	42"	48"	54"	60"	66"	72"	24"	
MLFS 48" - 72"	Halogen 3	THICK BAFFLES	2	2	3	3	4	4	5	5	18"	
MLSS-I 30" - 42"	Halogen 2	THICK BAFFLES		36"	42"	48"	54"	60"	66"	72"	34"	
MLSS-I 48" - 72"	Halogen 3	THICK BAFFLES		4	6	6	8	8	10	10	18"	

BAFFLE FILTERS, GREASE TROUGHS AND LIGHTS

Baffle Filters

Your baffle filters come with “gripper” knobs to aid in filter placement and removal. Grab the “gripper” knobs with your thumb and index finger. Simultaneously, slide and force the first baffle filter in an upward (slightly pitched) direction towards the ceiling. (Note: spring clips have been attached within the framework to prevent the baffle filters from rattling when fan is operating. These spring clips will make it difficult to insert and remove baffle filters.) As the baffle filter is forced upward towards the ceiling, simultaneously swing the lower portion of the filter down and out of the framework. Remove the remaining baffle filters in the same fashion. The first baffle filter removed may be difficult..... the remaining filters will follow with ease.

Baffle filters may be washed in your dishwasher. Simply place on the lower rack of dishwasher using a normal cleaning cycle.

To re-install your new/clean baffle filters within the hood cavity, begin the above process but in reverse. First, place the clean “grease trough(s)” in the cavity framework followed by the first of the baffle filters keeping in mind the first of the baffle filters will be easy to re-install..... the last baffle filter will be difficult due to the tight fit and limited space.

Grease Troughs


The “grease trough” rests within the lowest portion of the rectangular open framework. Check for grease build-up each month. The “grease trough(s)” may be wiped free of excess grease and placed on top-shelf of your dishwasher for cleaning.

Halogen Lights

Halogen lights are included with the purchase of your hood. They are packaged in a cardboard box and taped within the interior hood cavity behind the baffle filters. To purchase halogen bulbs through Prizer Hoods, you may contact our Customer Service Department or visit your local home improvement store replacing with a PAR 20 - Medium Base, 50 watt, 120 volt, Halogen Flood. Be sure to take your old halogen bulb with you to ensure your new bulb is similar in length with the same bulb specifications.

Controls

Always “turn-on” the hood fan prior to cooking in order to establish an airflow in the kitchen. Allow the fan to remain

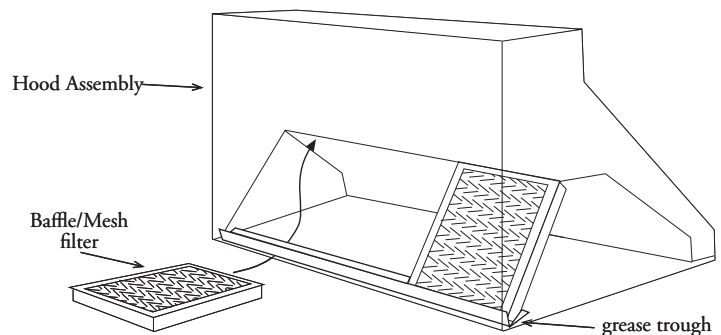

operating after cooking for a few minutes to clear the air. This measure will ensure the kitchen remains smoke-free and fresher smelling.

Fan

The hood's fan is controlled by a three-speed switch. Speeds: **OFF**, **LOW**, **MEDIUM**, **HIGH** are printed next to the fan control knob and correspond to the fan speed.

Hood Lighting

The halogen lights are controlled by a single light switch. The lighting has a **LOW** setting (ambient lighting) and a **HIGH** setting (brilliant lighting).

Cleaning Your Stainless Steel Hood

Keep your hood free of grease build-up under the hood's surface as well as exterior surfaces. Do not use abrasive cloths, steel wool, scrubbing pads or scouring powders. Do not use paper towels or any other coarse cloths for cleaning stainless steel. Have prepared, a supply of pre-washed, (100% cotton) **flannel** cleaning cloths or micro-fiber cleaning cloths. You may purchase 100% cotton **flannel** by the yard at your local fabric store. Pre-wash flannel in hot water using laundry detergent without fabric softeners and place in dryer without fabric softening sheets.

We recommend using a stainless steel cleaning spray to maintain the beautiful luster of your stainless steel hood. Spray the cleaning/polishing solution directly onto a cleaning cloth as supposed to spraying the surface of the hood.

“**Clean Source**” stainless spray may be purchased by contacting our Customer Service Department.

CLEANING RECOMMENDATIONS

BRUSHED STAINLESS STEEL, HAMMERED STAINLESS, EUROPEAN BLACK STEEL and MILLENNIUM DISK STAINLESS

The Brushed Stainless Steel Hood should be cleaned with pre-washed flannel cloths and our recommended **“Clean Source”** cleaner. Always wipe in a manner which follows the grain. **DO NOT** clean with paper towels as they will scratch the surface. Cleaning cloths other than cotton flannel may scratch the surface of the hood.

ANTIQUATED COPPER, ANTIQUATED BRASS

The Antiquated Copper and Antiquated Brass Hoods should be cleaned twice yearly. Use pre-washed flannel cloths and “S.C. Johnson P-A-S-T-E Wax” available at Lowe’s Home Improvement Centers. Gently apply a small amount in a circular motion using very light pressure. Rubbing too hard may result in the removal of the finish. **DO NOT** clean with paper towels as scratches will occur. Cleaning cloths other than cotton flannel may scratch the surface of the hood.

MIRRORED STAINLESS STEEL, POWDER COATINGS

The Mirrored Stainless Steel or Powder Coated Hood should be cleaned with pre-washed flannel cloths and any spray glass cleaner. **DO NOT** clean with paper towels, as they will scratch the surface of the hood. Different cleaning cloths other than cotton flannel may scratch the surface of the hood.

MIRRORED COPPER, HAMMERED COPPER, BRUSHED COPPER

The Copper Hood should be cleaned with pre-washed flannel cloths and **“Brite Boy”** metal polish. Always wipe in a manner, which follows the grain should a grain pattern exist. **DO NOT** clean with paper towels, as they will scratch the surface. Different cleaning cloths other than cotton flannel may scratch the surface of the hood.

MIRRORED BRASS, HAMMERED BRASS, BRUSHED BRASS

The Brass Hood should be cleaned with pre-washed flannel cloths and **“Brite Boy”** metal polish. Always wipe in the manner, which follows the grain should a grain pattern exist.. **DO NOT** clean with paper towels, as they will scratch the surface. Different cleaning cloths other than cotton flannel may scratch the surface of the hood.

INTERIOR OF HOOD

All hoods are fitted with a brushed stainless steel liner. For cleaning, we recommend using pre-washed flannel cloths and **“Clean Source”** cleaner. Always wipe in a manner, which follows the grain. **DO NOT** clean with paper towels, as they will scratch the surface of the hood.

BAFFLE FILTERS AND GREASE TROUGHS

Baffle Filters and Grease Troughs may be cleaned in your dishwasher. The grease troughs should first be cleaned of excess grease with a paper towel, then placed beside the baffle filters in your dishwasher for a thorough cleaning.

“Clean Source” and **“Brite Boy”** cleaner may be purchased directly from Prizer Hoods.

TROUBLE-SHOOTING TIPS

PROBLEM OR CONDITION

POSSIBLE SOLUTION

Fan and Lights do not operate

- A fuse may be blown or the circuit breaker tripped. Replace the fuse or reset the breaker.
- Electrical connections at the wiring box may have been made incorrectly. Contact the installer.

Fan runs but Lights do not operate

- The bulb may have burned out.
- The fuse for the bulb may have blown.
- Switch operation may be faulty.

Fan does not function, but Lights operate

- Connect fan directly to a supply cord, by-passing hood control.
- If fan operates, check and replace switch and/or control board.

Excessive fan speed and/or noise

- Check to ensure fan wheel is not hitting the side of the assembly. Adjust if necessary.
- Check/tighten fan mounts.
- Check for obstructions in damper flap or duct work.
- Check for proper installation; excessive length in duct run, number of transitions/elbows and duct diameter.

Prizer Hoods reserves the right to change specifications or design without notice. Some models are certified for use in Canada. Prizer Hoods is not responsible for products which are transported from the United States for use in Canada. Check with your local Canadian distributor or dealer.

